



HANDY

---

# HANDSFREE

---

CUP

# USER GUIDE

1



The Handsfree Cup is composed of:  
A. 1/4-inch universal screw hole  
B. Thumb screw  
C. Anti-slip pad

2

Placement on **TOP** of Handy

Place the cup with the thumb screw aligned with the buttons.



3



Placement on **TOP** of Handy

The cutout of the cup should be aligned with the slider slot of Handy to ensure that the cup is securely attached.

4



Placement at the **BOTTOM** of Handy

Place the cup with the thumb screw aligned with the logo.

5

Placement at the **BOTTOM** of Handy

The cutout of the cup should be aligned with the slider slot on Handy to ensure that the cup is securely attached.



6



Placement at the **BOTTOM** of Handy

Check the alignment by pushing the slider to the bottom and ensure there is a gap between the slider and the cutout of the cup.

7



Once the cup is securely attached, tighten it using the thumb screw.

Do not overtighten as this could damage the cup or the Handy.

8

If the cup seems loose or not tight enough, you may need to adjust the position of the cup or make sure that it is properly aligned with Handy.



9



Once the cup is well-aligned and tightened, you can attach any accessories that have a 1/4-inch universal screw to the cup.

The 1/4-inch screw is a standard size that is commonly used to attach a wide range of camera and photography accessories, such as tripods, monopods, arm, and more.

10



Do make sure that the accessory is securely tightened in the cup to ensure stability during use. You may use the washer that is often included with the 1/4-inch universal screw to secure the connection.

## Tighten, secure, enjoy!!

Using the handsfree cup will keep your hands free while you sit back, relax, and level up the immersiveness of your Handy experience.